


WEB STIFFENER (TYP.)
AS REQUIRED EACH JOIST

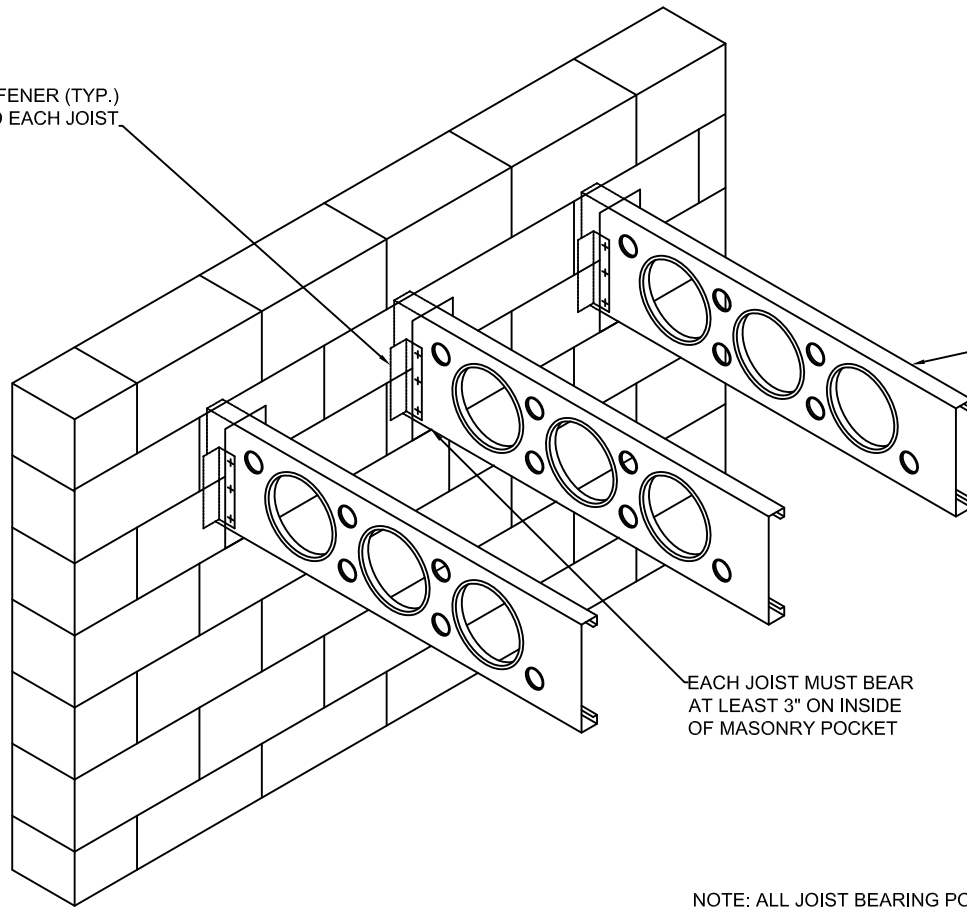

JOIST: SEE PLAN FOR
SIZE, LAYOUT, AND SPACING

EACH JOIST MUST BEAR
AT LEAST 3" ON INSIDE
OF MASONRY POCKET

NOTE: ALL JOIST BEARING POCKETS MUST BE
FILLED WITH GROUT OR MORTAR BEFORE
JOISTS ARE FULLY LOADED

JOIST DETAIL IN WALL POCKET

